

480V.  
60 HZ.  
LINE



FUSED DISCONNECT  
OR CIRCUIT BREAKER  
(CUSTOMER SUPPLIED)

CUSTOMER CONNECTIONS

CUSTOMER CONNECTIONS




75 HP AND BELOW : USE MINIMUM 60°C COPPER WIRE  
ABOVE 75 HP : USE MINIMUM 75°C COPPER WIRE

FACTORY POWER CONNECTIONS

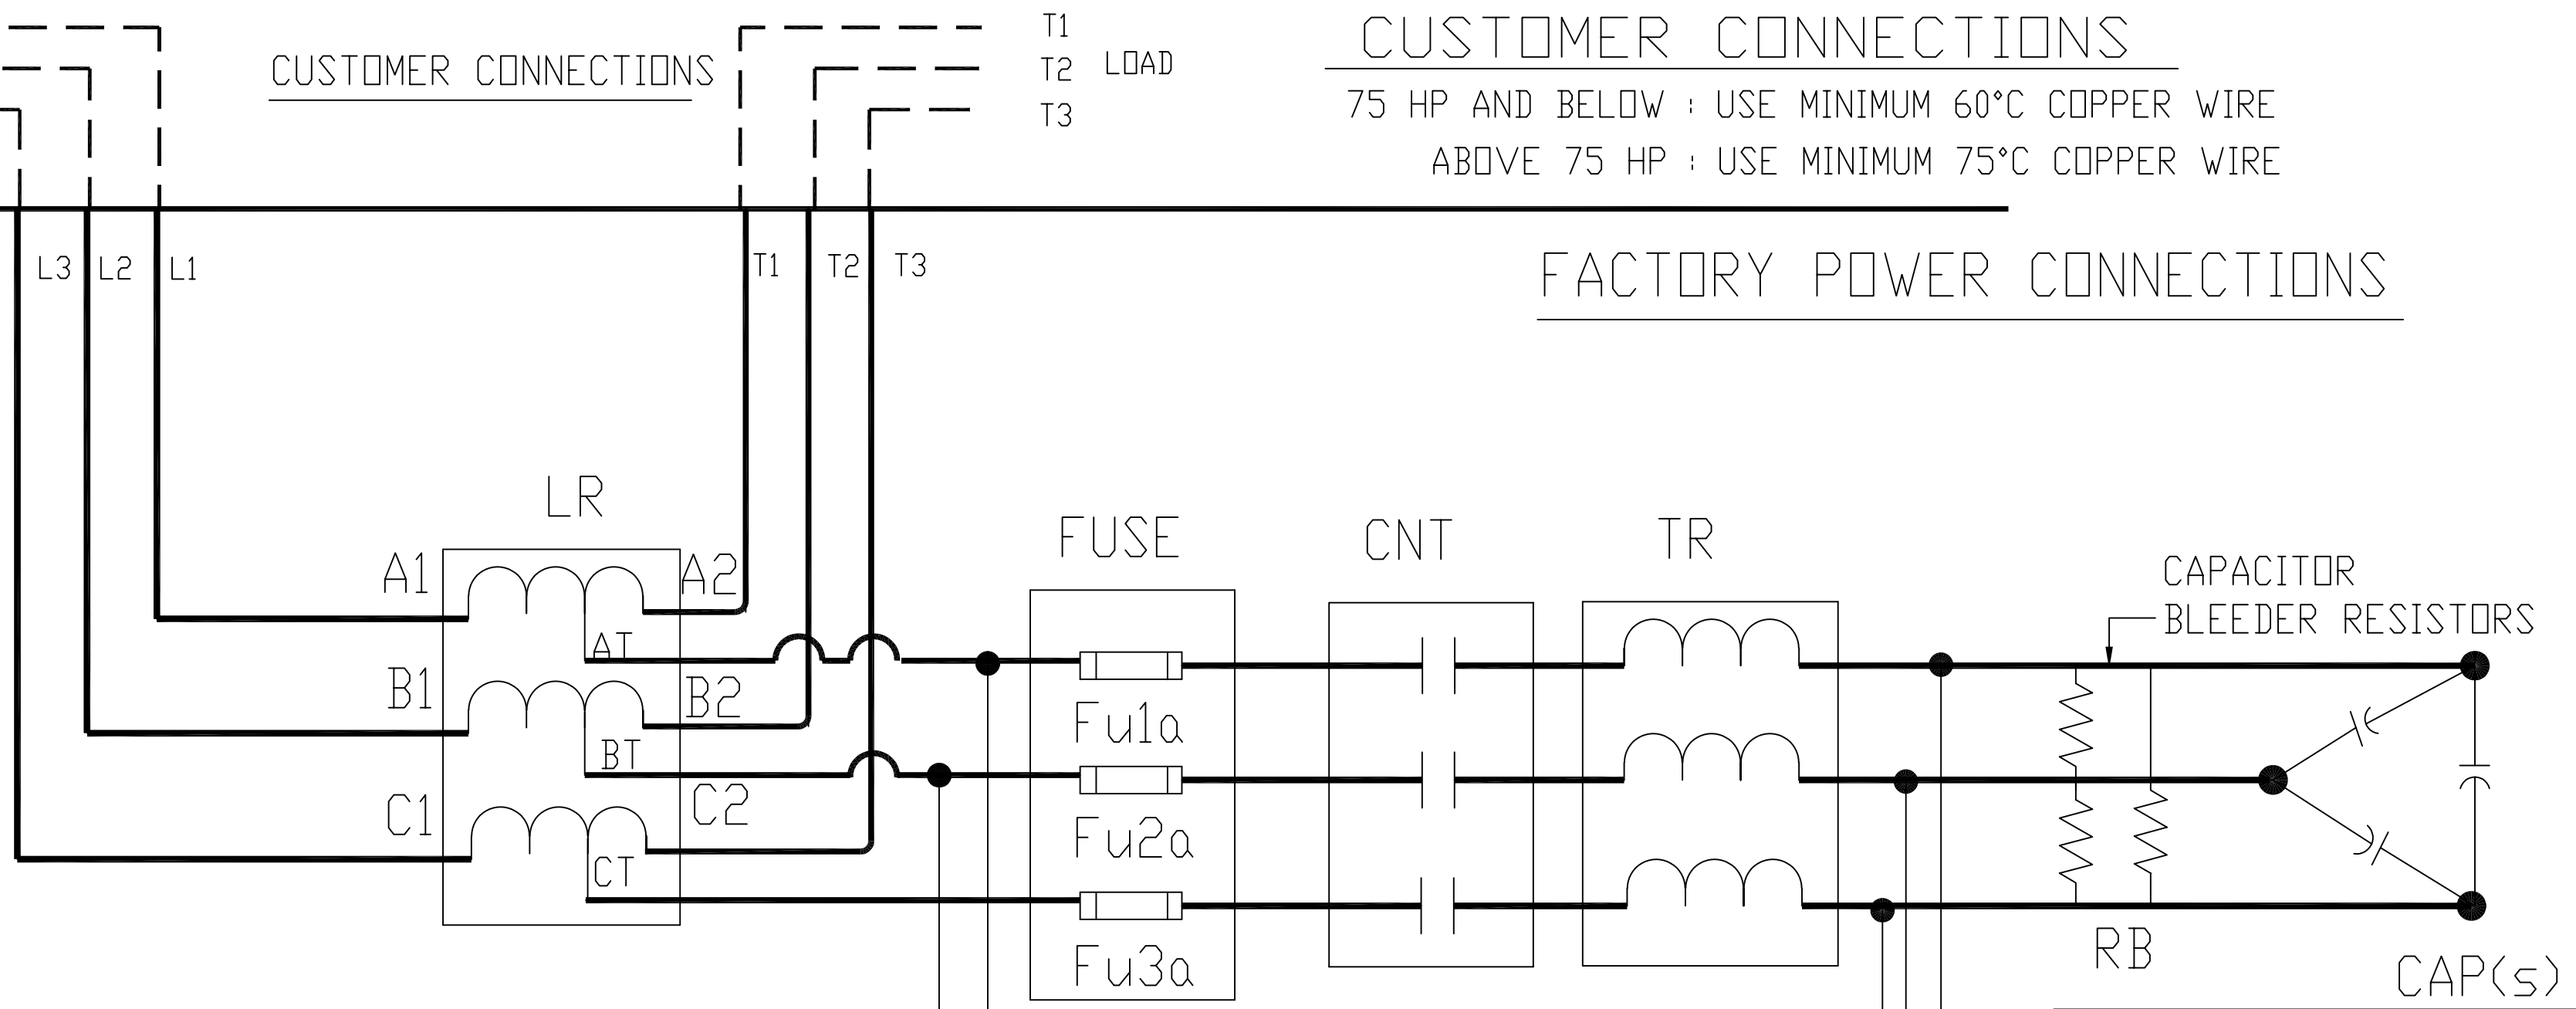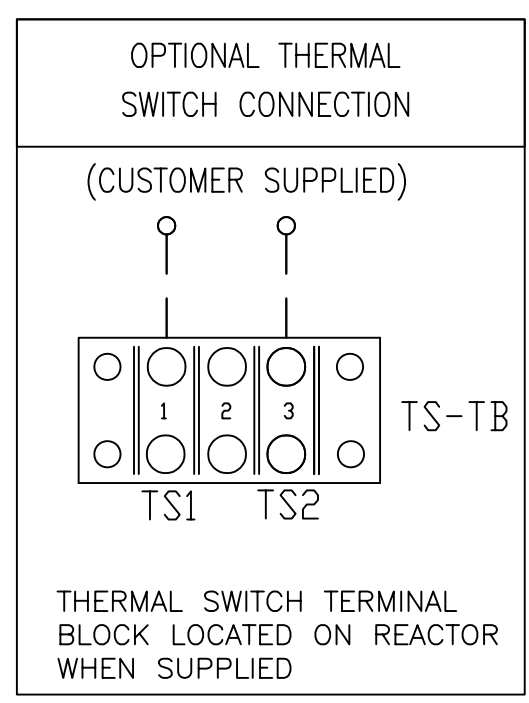


CONTROL CONNECTIONS

NOTE 1:  
FOR PROPER OPERATION  
CONNECT AUXILIARY N.O.  
RUN RELAY CONTACT  
FROM DRIVE

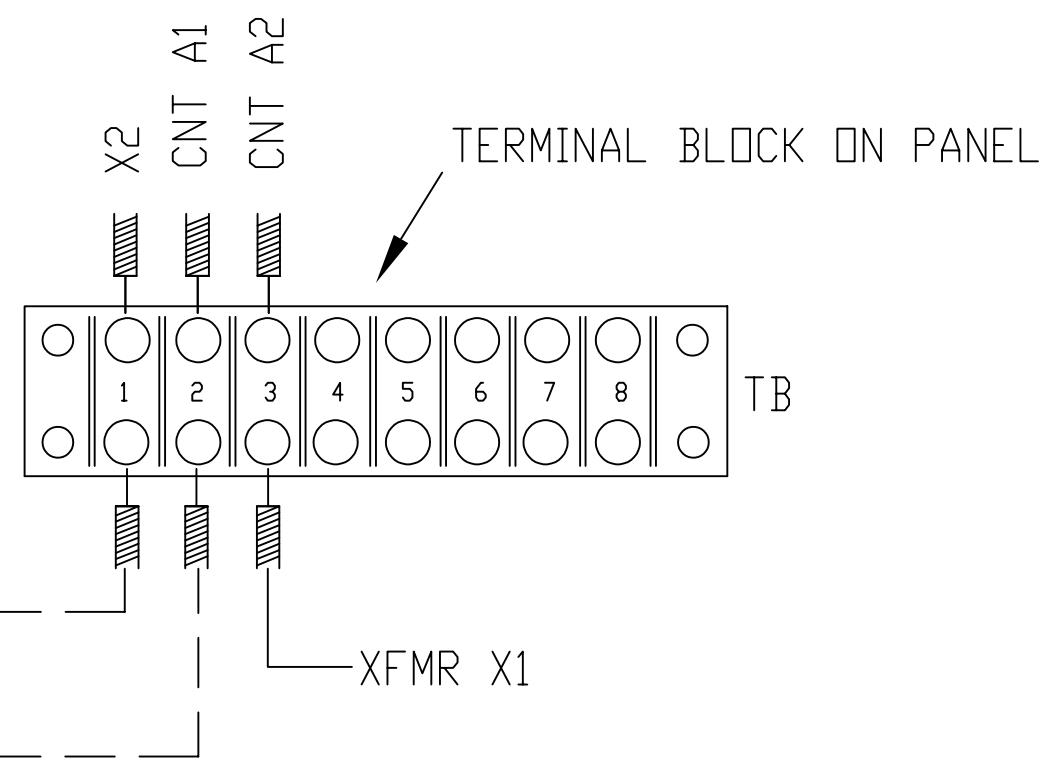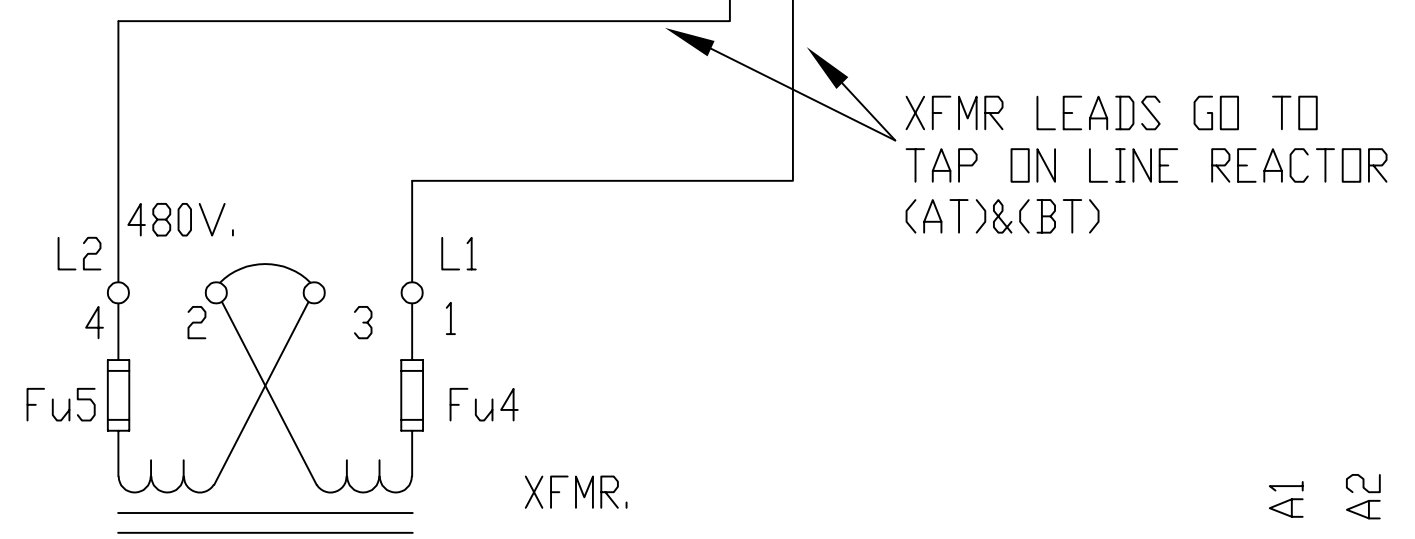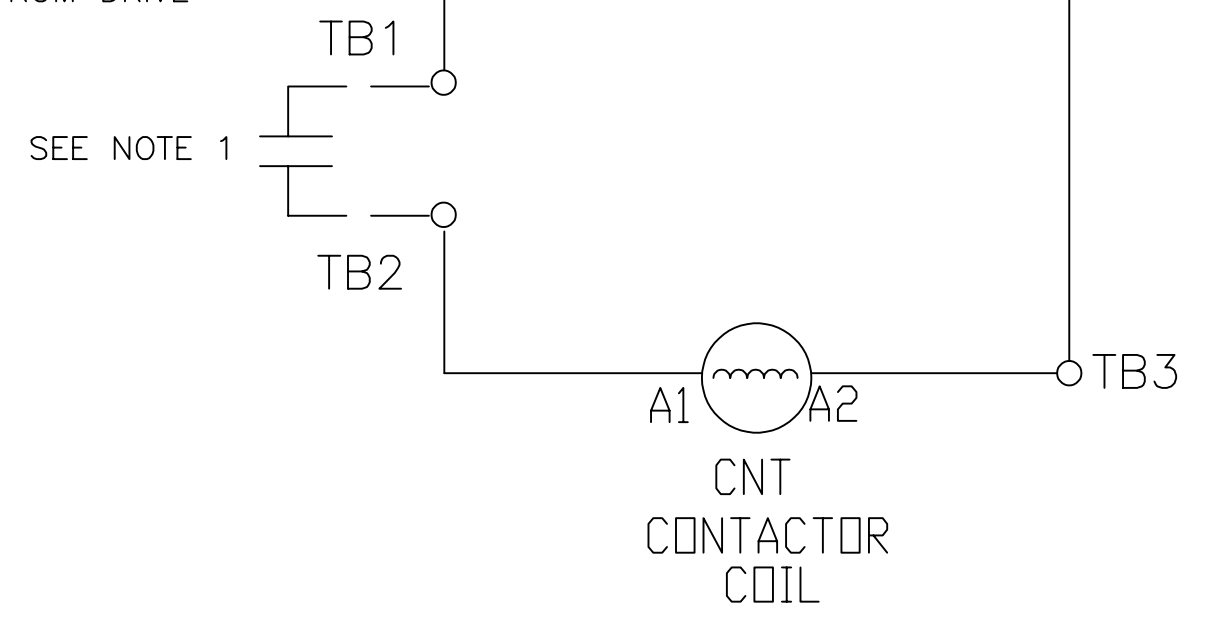

SCHEMATIC FOR FUSE MONITOR, OPTION

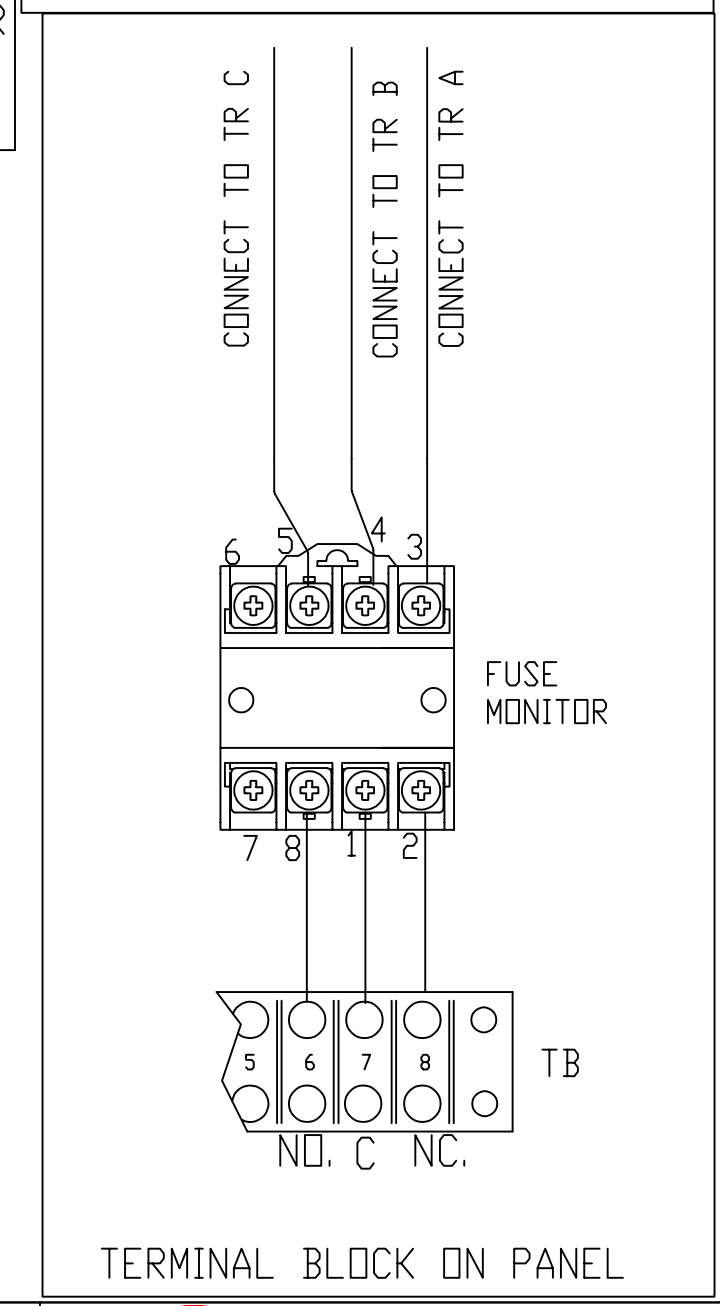

TCI, LLC CLAIMS PROPRIETARY RIGHTS IN THE MATERIAL HEREIN DISCLOSED. IT IS SUPPLIED WITHOUT PREJUDICE TO ANY PATENT RIGHTS OF TCI AND MAY NOT BE REPRODUCED OR USED TO MANUFACTURE ANYTHING SHOWN THEREIN WITHOUT WRITTEN PERMISSION FROM TCI.	NO	REVISION	DATE	BY	TOLERANCES (EXCEPT AS NOTED) DECIMAL
	D	6582 Show TB3	02/22/24	JRN	.XX ± NA
	C	6448 ADD T/S OPTION	10/24/16	BWM	.XXX ± NA
	B	3789 REMOVE FUSE MONITOR FUSING	10/24/16	BWM	FRACTIONAL ± NA
	A	AS DRAWN	6/18/15	BWM	ANGULAR ± NA

**TCI** W132 N10611 Grant Drive  
Germantown, WI 53022  
© TCI, 2024

**HARMONICGUARD PASSIVE**  
480V SCHEMATIC  
CONTACTOR VERSION

DRN. BY BWM DATE 6/18/15 DVG. NO. 29597  
SCALE NONE SIZE C

SHT. 1 of 1