

480V.
60 HZ.
LINE

FUSED DISCONNECT
OR CIRCUIT BREAKER
(CUSTOMER SUPPLIED)


CUSTOMER CONNECTIONS

T1
T2 LOAD
T3


CUSTOMER CONNECTIONS

10 HP AND BELOW 14 AMPS : USE MINIMUM 60°C COPPER WIRE

FACTORY POWER CONNECTIONS

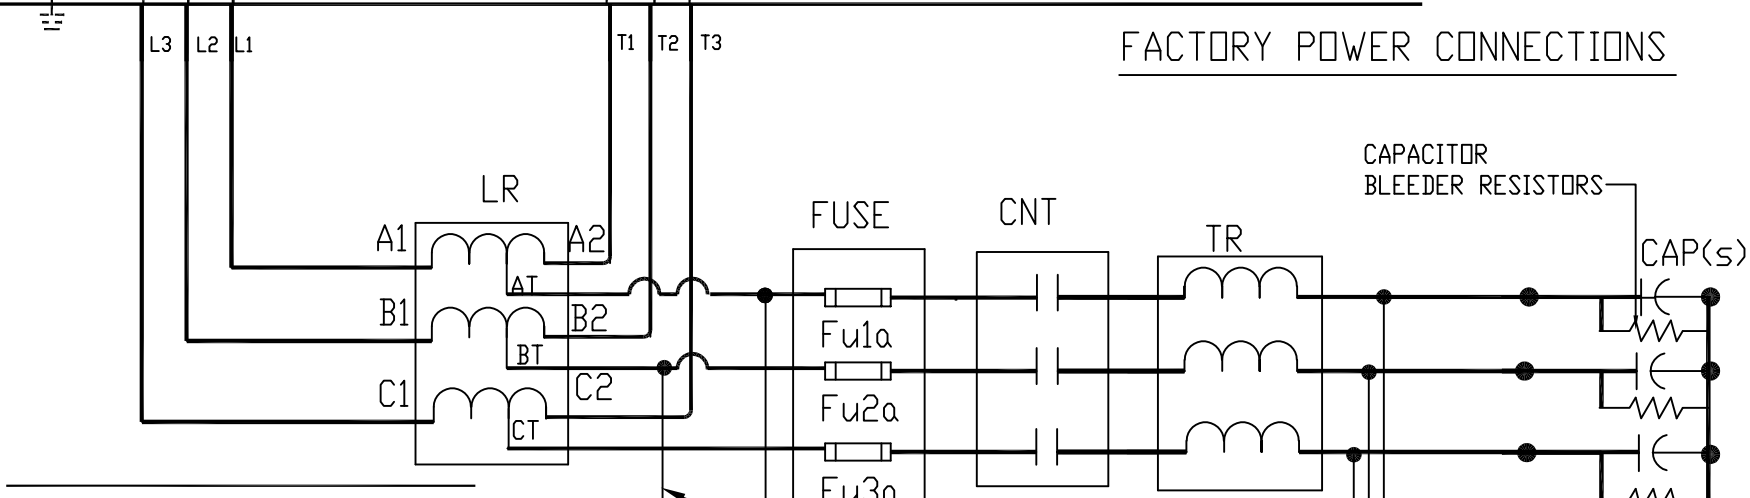


CONTROL CONNECTIONS

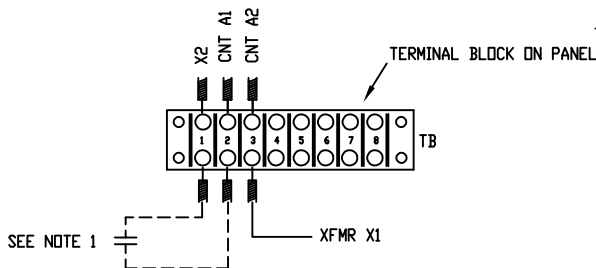

NOTE 1:
FOR PROPER OPERATION
CONNECT AUXILIARY N.O.
RUN RELAY CONTACT
FROM DRIVE


SEE NOTE 1

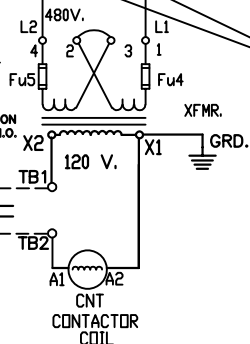


XFMR LEADS GO TO
TAP ON LINE REACTOR
(AT)&(BT)

CONNECTIONS FOR
FUSE MONITOR
OPTION

SCHEMATIC FOR FUSE MONITOR, OPTION

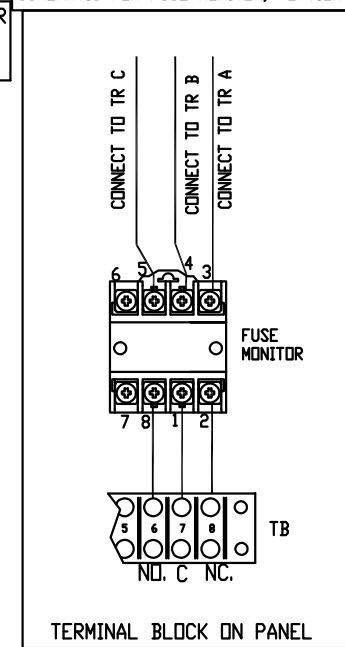

SCHEMATIC WHEN FAN IS INCLUDED.

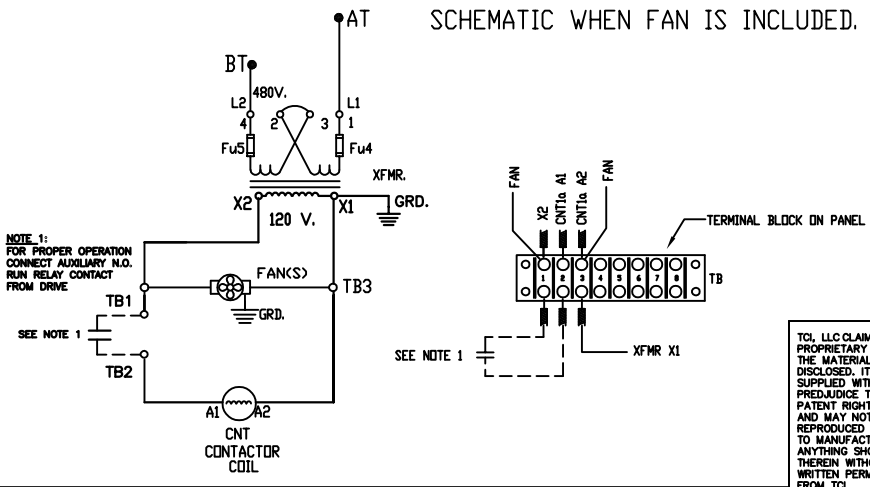

NOTE 1:
FOR PROPER OPERATION
CONNECT AUXILIARY N.O.
RUN RELAY CONTACT
FROM DRIVE

SEE NOTE 1

SEE NOTE 1

TCL, LLC CLAIMS PROPRIETARY RIGHTS IN THE MATERIAL HEREIN DISCLOSED. IT IS SUPPLIED WITHOUT PREJUDICE TO ANY PATENT RIGHTS OF TCL AND MAY NOT BE REPRODUCED OR USED TO MANUFACTURE ANYTHING SHOWN THEREIN WITHOUT WRITTEN PERMISSION FROM TCL.				TOLERANCES EXCEPT AS NOTED: DECIMAL .XX ± NA .XXX ± NA FRACTIONAL ± NA ANGULAR ± NA		W132 N10611 GRANT DRIVE GERMANTOWN, WI 53022 HARMONICGUARD PASSIVE 480V SCHEMATIC 5HP TO 10HP OPEN AND ENCLOSED CONTACTOR VERSION. DRW BY DSW DATE 3/23/16 DWG NO. 29597-T SCALE NONE SIZE C	
NO	FM, Fuses Removed	1/15/2020	DSW	DATE	BY	SCALE	SIZE
NO	REVISION	DATE	BY	SCALE	SIZE	NO.	SHT. 1 OF 1